


# CYGNETT®

**Boost 4S  
20W Power Bank with USB-C  
Lanyard Cable 10K**

## User Manual

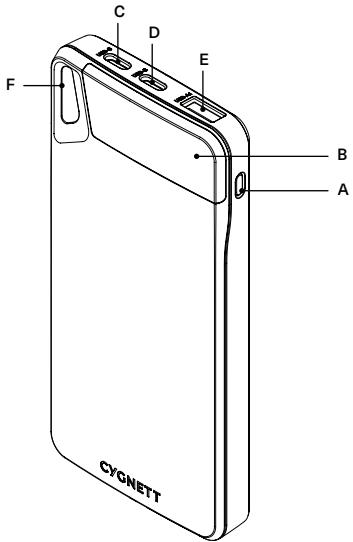

- A** Power Button
- B** LED Battery Indicator
- C** USB-C2 Port
- D** USB-C1 Port (Input/Output)
- E** USB-A Port
- F** Lanyard Hole

### Charge your devices

Recharge your device by connecting a compatible cable into the USB-C output (C/D) or USB-A output (E). Press the power button (A), and your device should begin to charge. When you are finished charging your device, remove the cable from your power bank and it will turn off automatically.

To check the remaining charge on your power bank, press the power button (A) once. The LED battery indicator (B) will show the remaining charge.

### Recharge your power bank

To recharge your power bank, use the included USB-C to USB-C cable with a compatible charger. Insert the USB-C connector into the USB-C input (D). When recharging, the LED battery indicator (B) will flash, indicating the remaining charge levels.

After using the product's power, charge it at least 30% before turning off to ensure optimum battery life.

### Product Specifications

|                               |                                                                                                                                                                                                                                                                             |
|-------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Name</b>                   | Boost 4S 20W Power Bank with USB-C Lanyard Cable 10K                                                                                                                                                                                                                        |
| <b>Item Number</b>            | CY6057PBCHE, CY6058PBCHE<br>CY6235PBCHE                                                                                                                                                                                                                                     |
| <b>Lithium Battery Energy</b> | 37Wh (3.7V, 10000mAh)                                                                                                                                                                                                                                                       |
| <b>Rated Capacity</b>         | 6,200mAh (5.0V~3.0A)                                                                                                                                                                                                                                                        |
| <b>Input(s)</b>               | <b>USB-C1 Port (Input):</b><br>5.0V~3.0A (15.0W), 9.0V~2.0A (18.0W)                                                                                                                                                                                                         |
| <b>Output(s)</b>              | <b>USB-C1 Port (Output):</b><br>5.0V~3.0A (15.0W), 9.0V~2.22A (20.0W),<br>12.0V~1.67A (20.0W).<br><b>USB-C2 Port:</b><br>5.0V~3.0A (15.0W), 9.0V~2.0A (18.0W),<br>12.0V~1.5A (18.0W).<br><b>USB-A Port:</b><br>5.0V~3.0A (15.0W), 9.0V~2.0A (18.0W),<br>12.0V~1.5A (18.0W). |
| <b>Total Output</b>           | 15.0W Max                                                                                                                                                                                                                                                                   |

### Caution

Please read all warnings for your safety and optimal user experience. Please read and follow these instructions carefully and retain for your records.

- Do not disassemble or throw into fire or water.
- Do not microwave, incinerate, paint, or insert foreign objects into the power bank.
- Do not expose to extreme weather conditions.
- Do not use this product if you observe visible defects.
- Do not short circuit the product or store it in a receptacle where it may be short circuited by other metallic or conductive objects.
- Do not operate the product if it has been wet or otherwise damaged, to prevent against electric shock, explosion and/or injury.
- Never attempt to dismantle the unit.
- Children should be supervised to ensure that they do not play with the product.
- Do not leave product/device unattended (e.g., leaving in the car).
- Always disconnect the device when not in use.
- Do not leave the power bank (on charge or charging a device) unattended.
- Do not use if broken, damaged, or exposed to liquids.
- Not to be used in extremely high ambient temperatures.
- Do not use with damaged or faulty accessories.
- Do not place near any sources of heat, open flame, or liquid.
- Disposal of a battery into fire or a hot oven, mechanically crushing or cutting of a battery, may result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment, such as direct sunlight, fire, or a hot surface may result in an explosion or the leakage of flammable liquid or gas
- The power bank will generate heat when charging. Always charge in a well-ventilated area away from direct sunlight. Do not charge under pillows, blankets or on flammable surfaces.
- Do not subject the power bank to mechanical shock such as crushing, bending, puncturing or shredding. Avoid dropping or placing heavy objects on the power bank.
- Do not store the power bank without power to prevent the battery from being deeply over discharged, which may cause the battery bulge.
- Keep the power bank away from heat sources, direct sunlight, combustible gas, humidity, water, or other liquids.
- A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.
- Operating temperature should be between 0°C to 40°C.
- Storage and transportation ambient temperature: 0°C to 40°C.
- There is a risk of fire or explosion if the battery is replaced with an incorrect type.
- Replacement of a battery with an incorrect type may defeat a safeguard
- Do not operate at an altitude higher than 2,000m (air pressure not less than 70kPa).
- Do not hold the power bank for a long time while charging the device.



This symbol on the product indicates that this product shall not be treated as household waste. Instead it shall be sent to the applicable collection point for the recycling of electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health. For more information about the recycling of this product, please contact your local city office.

Cygnett and the Cygnett logo are trademarks of Cygnett Pty Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders. Made in China.

**Cygnett Pty Ltd**  
858 Lorimer Street, Port Melbourne,  
Victoria, 3207, Australia

**Cygnett USA Inc**  
3838 W Carson St, Ste 220, Torrance,  
CA 90503 USA

**Cygnett NZ Ltd**  
Level 9, 45 Queen Street, Auckland 1010  
New Zealand

**Cygnett UK Ltd**  
71-75 Shelton St, London,  
WC2H 9JQ UK

**Cygnett EU**  
Redwood Fulfillment, Sikkell 17, 3274 KK  
Heinenoord, The Netherlands

**Cygnett EU Authorised Representative**  
24hour-AR, Van Nelleweg 1, 3044 BC  
Rotterdam, The Netherlands  
compliance@24hour-ar.com



本产品上的此标志表示，本产品不得作为生活垃圾处理。请将其送至指定的废弃电子电气产品回收点进行回收处理。正确处置本产品有助于避免对环境和人体健康造成潜在的不良影响。如需了解有关本产品回收的更多信息，请联系当地相关部门。

Cygnett 及 Cygnett 标识均为 Cygnett Pty Ltd. 的商标。其他品牌及产品名称均为其各自所有者的商标或注册商标。

中国制造。

制造商: Cygnett Pty Ltd. (澳大利亚)  
地址: 858 Lorimer Street, Port Melbourne  
VIC 3207 Australia (澳大利亚)



**警告：浸水后禁止使用！**

- 将电池放置在温度极高的环境中，如阳光直射、火或热的表面，可能会导致爆炸或易燃液体或气体泄漏。
- 充电宝在充电时会产生热量。总是充电。通风良好，避免阳光直射。请勿在枕头、毯子或易燃表面上充电。
- 请勿使充电宝受到机械冲击，如压碎、弯曲、刺破或撕碎。避免在移动电源上掉落或放置重物。
- 不要在没有电的情况下存放移动电源，以免电池深度过放电，造成电池鼓起。
- 请远离热源、阳光直射、可燃气体、潮湿、水或其他液体。
- 电池在极低的气压下可能会发生爆炸或泄漏可燃液体或气体。
- 工作温度应在 0°C 至 40°C 之间。
- 储存和运输环境温度：0°C~ 45°C。
- 充电时不要长时间握住移动宝设备。
- 消费者若使用电源适配器供电，则应购买配套使用获得CCC认证并满足标准要求的电源适配器。
- 产品适用的海拔高度由最终选用的电源适配器决定。

#### 注意事项:

为了您的安全及获得最佳使用体验，请仔细阅读所有警告信息。请认真阅读并遵循本说明书中的各项指示，并妥善保存以备日后查阅。

- 请勿拆卸或投入火中或水中。
- 请勿微波、焚烧、涂漆或将异物插入充电宝。
- 不要暴露在极端天气条件下。
- 如果观察到明显的缺陷，请勿使用本产品。
- 请勿使产品短路或将产品存放在可能被其他金属或导电物体短路的插座中。
- 请勿将产品弄湿或损坏，以防止触电、爆炸和/或伤害。
- 不要试图拆卸设备。
- 应监督儿童，以确保他们不玩产品。
- 不要让产品/设备无人看管（例如，留在车内）。
- 不使用设备时，请务必断开连接。
- 不要让移动电源（在充电或给设备充电）无人看管。
- 如果破碎，损坏或暴露在液体中，请勿使用。
- 不能在极高的环境温度下使用。
- 请勿与损坏或有缺陷的配件一起使用。
- 不要放置在热源、明火或液体附近。
- 将电池放入火中或热烘箱中，机械压碎或切割电池，都可能导致爆炸。

#### 产品规格:

|       |                                                                                                                                                                                                                                                   |
|-------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 名称:   | Boost Four S Ten K Power Bank/<br>移动电源                                                                                                                                                                                                            |
| 型号:   | CY6057PBCHE, CY6058PBCHE<br>CY6235PBCHE                                                                                                                                                                                                           |
| 电池容量: | 37Wh (3.7V, 10000mAh)                                                                                                                                                                                                                             |
| 额定容量: | 6,200mAh (5.0V~3.0A)                                                                                                                                                                                                                              |
| 输入    | USB-C1 (输入):<br>5.0V~3.0A (15.0W), 9.0V~2.0A<br>(18.0W)                                                                                                                                                                                           |
| 输出:   | USB-C1 (输出):<br>5.0V~3.0A (15.0W), 9.0V~2.22A<br>(20.0W), 12.0V~1.67A (20.0W).<br><br>USB-C2 输出:<br>5.0V~3.0A (15.0W), 9.0V~2.0A<br>(18.0W), 12.0V~1.5A (18.0W).<br><br>USB-A 输出:<br>5.0V~3.0A (15.0W), 9.0V~2.0A<br>(18.0W), 12.0V~1.5A (18.0W). |
| 总输出   | 15.0W Max                                                                                                                                                                                                                                         |

#### 给设备充电:


通过将兼容的电缆连接到USB-C输出（C/D）或USB-A输出(E)为设备充电。按下电源按钮(A)，你的设备应该开始充电。当你的设备充电完成后，从你的移动电源上取下电缆，它会自动关闭。  
按电源按钮(A)一次，检查电源上的剩余电量。LED电池指示灯(B)将显示剩余电量。

#### 给充电宝充电:

要给移动电源充电，请使用随附的USB-C to USB-C电缆和兼容充电器。将USB-C连接器插入USB-C输入(D)。  
充电时，LED电池示灯(B)将闪烁，指示剩余电量。

使用完产品电源后，请在关机前至少充电30%，以确保最佳电池寿命。

- A 电源按钮
- B 数字显示屏
- C USB-C2 输出
- D USB-C1 输出和输入
- E USB-A 输出
- F 挂绳孔

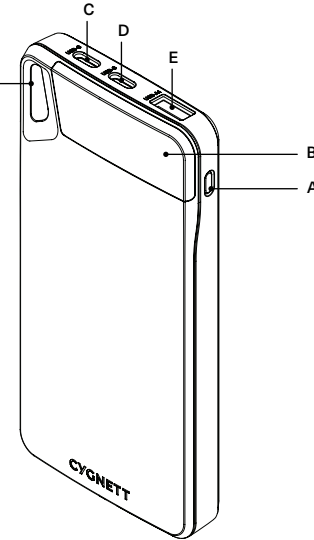

# CYGNETT®

**Boost Four S Ten K Power Bank  
移动电源**

**用户手册**