


Charging USB Devices

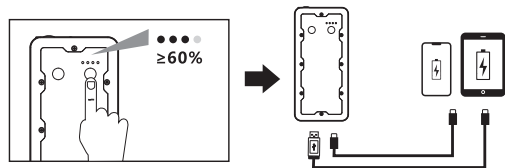

Caution: Only use quality USB cable to perform input charging. Note: Fully discharge the battery via USB output port and recharge to full every 3 months to prolong its battery life.

Turn off the Jump Starter

When detect no LOAD for 30 seconds, the unit will turn off by itself. Make sure Jumper cable is NOT connected to the unit when storage.

Caution

Please read all warnings for your safety and optimal user experience. Please read and follow these instructions carefully and retain for your records.

1. Disposal of a battery into fire or a hot oven, mechanically crushing or cutting of a battery, can result in an explosion.
2. Leaving a battery in an extremely high temperature can result in an explosion or the leakage of flammable liquid or gas.
3. A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.
4. Power bank will generate heat when charging. Always charge in a well-ventilated area. Do not charge under pillows, blankets or on flammable surfaces.
5. Keep the power bank away from heat sources, direct sunlight, combustible gas, humidity, water or other liquids.
6. Do not disassemble, open, microwave, incinerate, paint or insert foreign objects into the power bank. Do not subject the power bank to mechanical shock such as crushing, bending, puncturing or shredding. Avoid dropping or placing heavy objects on the power bank.
8. Do not short circuit the power bank or store it in a receptacle where it may be short circuited by other metallic or conductive objects.

9. Do not operate the power bank if it has been wet or otherwise damaged, to prevent electric shock, explosion and/or injury. Contact the dealer or authorised agent.
10. Do not connect the red and black clamps to the same piece of metal, to prevent injury and damage to the vehicle.
11. Always make sure the relay plug of the jumper cable connects with the jump starter socket securely into the power bank before jump starting the vehicle.
12. Always check that the clamps are securely connected. Ensure the vehicle battery is free of rust/dirt before jump starting the vehicle.
13. Do not connect the two clamps together, as this could be dangerous.
14. Keep power bank away from children.
15. Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Save this Instruction

WARNING: This jump starter is intended for use with 12V vehicle batteries only. Use with other battery types or vehicles may result in damage, fire, or serious injury. Always consult your vehicle's owner's manual to confirm compatibility before use.

Cygnett and the Cygnett logo are trademarks of Cygnett Pty Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders. Made in China.

Cygnett Pty Ltd
858 Lorimer Street, Port Melbourne,
Victoria, 3207, Australia

Cygnett NZ Ltd
Level 9, 45 Queen Street,
Auckland 1010 New Zealand

Cygnett USA Inc
3838 W Carson St, Ste 220,
Torrance, CA 90503 USA

Cygnett UK Ltd
71-75 Shelton St, London,
WC2H 9JQ UK


Cygnett EU
Redwood Fulfillment, Sikkel 17,
3274 KK Heinenoord,
The Netherlands

**Cygnett EU
Authorised
Representative**
24hour-AR, Van Nelleweg 1, 3044
BC Rotterdam, The Netherlands
compliance@24hour-ar.com

CYGNETT®

**JumpUp Essentials
Portable Jump Starter
with Power Bank 10K**

User Manual

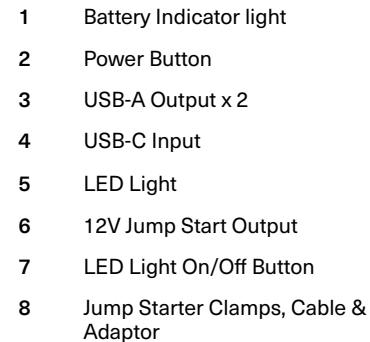

Name	JumpUp Essentials Portable Jump Starter with Power Bank 10K
Item Number	CY6202CHAUT
Total Cell Capacity	10,000mAh
Battery Capacity	14.8V/37Wh
Theoretical Short Circuit Current	12V=2000A
Clamp Peak Power	12V=1000A
Start Current	12.0V=350A (3s On, 10s Off)
USB-C Input	5.0V=2.0A (10.0W), 9.0V=2.0A (18.0W), 12.0V=1.50A (18.0W Max.)
USB-A 1/2 Output	5V=2.4A (12.0W Max.)
Total Output	12.0W Max.
Operating Temperature	-20°C to 40°C
Standby Time	Up to 9-12 Months

 For engines up to 4500cc (4.5L) petrol and 7000cc (7.0L) diesel

Diagram illustrating the charging options for the device:

- Option 1: Charging via a standard AC power source (100-240V).
- Option 2: Charging via a 12V DC power source (e.g., car battery).

Both charging methods are indicated to take **About 2.6h** at an **18W Charger Rating**.

Status	Status	Action
Reverse Polarity	Red  + Beep	Correct connection
Others	Red 	Disconnect for 10 min
 Red	Red Light is ON when plug jump start cable into the jump starter, means low battery, please recharge the jump starter.	
	* Do not crank the engine for more than 3 seconds. * If jump start fail, disconnect jumper cable and reconnect	

A collection of safety icons. At the top, two crossed wrench and screwdriver icons indicate 'No Tools'. Below them, two battery icons are shown; the left one is labeled 'Clean' with a brush icon, and the right one is labeled 'No Tools' with a crossed wrench and screwdriver icon. To the right, three circular icons are stacked: the top one shows a face with a slash and '18' for 'No Under 18s', the middle one says 'Ventilated Area Only', and the bottom one shows a face with safety glasses for 'Wear Safety Glasses'.