

## Product Specifications

Name	ChargeUp Reserve 3rd Generation 20K
Item Number	CY4765PBCHE, CY4766PBCHE, CY4767PBCHE
Battery Capacity	20000mAh/74Wh
USB-C Input	5.0V~3.0A(15.0W), 9.0V~3.0A(27.0W), 12.0V~2.5A(30.0W), 15.0V~2.0A(30.0W), 20.0V~1.5A(30.0W)
Output(s)	USB-C Output 1: 5.0V~3.0A(15.0W) , 9.0V~3.0A (27.0W), 12.0V~2.5A(30.0W) , 15.0V~2.0A (30.0W), 20.0V~1.5A (30.0W) USB-C Output 2: 5.0V~3.0A(15.0W), 9.0V~2.0A(18.0W), 12.0V~1.5A (18.0W) USB-A Output: 5.0V~3.0A(15.0W), 9.0V~2.0A(18.0W), 12V~1.5A(18.0W)
Total Output	15.0W Max

## Caution

Please read all warnings for your safety and optimal user experience. Please read and follow these instructions carefully and retain for your records.

- Do not disassemble or throw into fire or water.
- Do not microwave, incinerate, paint, or insert foreign objects into the power bank.
- Do not expose to extreme weather conditions.
- Do not use this product if you observe visible defects.
- Do not short circuit the product or store it in a receptacle where it may be short circuited by other metallic or conductive objects.
- Do not operate the product if it has been wet or otherwise damaged, to prevent against electric shock, explosion and/or injury.
- Never attempt to dismantle the unit.
- Children should be supervised to ensure that they do not play with the product.
- Do not leave product/device unattended (e.g. leaving in the car).
- Always disconnect the device when not in use.
- Do not use if broken, damaged, or exposed to liquids.
- Not to be used in extremely high ambient temperatures.
- Do not use with damaged or faulty accessories.
- Do not place near any sources of heat, open flame or liquid.
- Disposal of a battery into fire or a hot oven, mechanically crushing or cutting of a battery, can result in an explosion.

- Leaving a battery in an extremely high temperature can result in an explosion or the leakage of flammable liquid or gas.
- The power bank will generate heat when charging. Always charge in a well-ventilated area. Do not charge under pillows, blankets or on flammable surfaces.
- Do not subject the power bank to mechanical shock such as crushing, bending, puncturing or shredding. Avoid dropping or placing heavy objects on the power bank.
- Do not store the power bank without power to prevent the battery from being deeply over discharged, which may cause the battery bulge.
- Keep the power bank away from heat sources, direct sunlight, combustible gas, humidity, water, or other liquids.
- A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.
- Operating temperature should be between 10°C to 45°C


Cygnett and the Cygnett logo are trademarks of Cygnett Pty Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders. Made in China.

**Cygnett Pty Ltd** 858 Lorimer St, Port Melbourne, Victoria 3207 Australia  
**Cygnett EU Authorised Representative** 24hour-AR  
Van Nelleweg 1, 3044 BC Rotterdam, The Netherlands  
compliance@24hour-ar.com  
**Cygnett USA Inc** 3838 W Carson St, Ste 220, Torrance, CA 90503  
**Cygnett UK Ltd** 71-75 Shelton St, London, WC2H 9JQ  
**Cygnett NZ Ltd** Level 9, 45 Queen Street, Auckland 1010

# CYGNETT®

## ChargeUp Reserve 3 Power Bank 20K

## User Manual

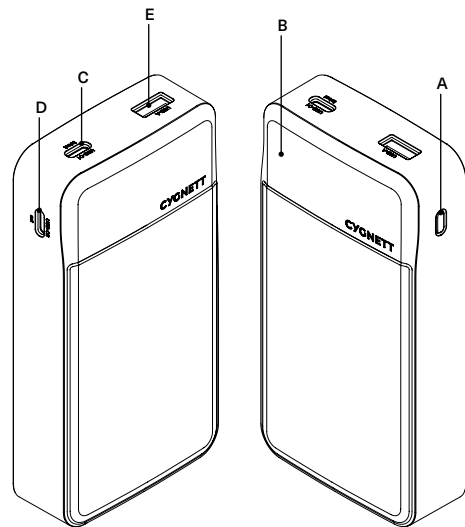

- A Power Button
- B LED Battery Indicator
- C USB-C Input/Output 1
- D USB-C Output 2
- E USB-A Output

### Charge Your Device


To ensure a proper charge it is important to plug the cables in the correct order.

Recharge your device(s) by first, connecting a compatible cable into the USB-C output(s) (C/D) and/or USB-A output (E) of the power bank and then the opposite end into your device(s). Press the power button (A), and your device(s) should begin to charge. When you are finished charging your device(s), remove the cables from your power bank, and it will turn off automatically.

To check the remaining charge on your power bank, press the power button (A) once. The LED battery indicator (B) will show the remaining charge from 0 to 100.

After using the product's power, charge it at least 30% before turning off to ensure optimum battery life

Total power output is not the max output from a single port, but a lower output to sustain power delivery across all ports being used.

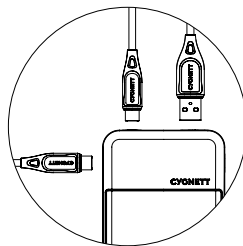

### Recharge Your Power Bank

To recharge your power bank, use the included USB-C to USB-C cable, and connect the USB-C into a compatible USB-C charger, then insert the USB-C connector into the USB-C input (C). When recharging, the LED battery indicator (B) will flash, indicating the remaining charge.

